

37595

# Print Quality Test Pages


## Using the Print Quality Test Pages

The Print Quality Test Pages are used to identify and correct print quality defects.

The following pages were printed using the factory default settings. Use plain paper when printing the pages.

Always perform the following checks for any print quality problem:

- Make sure that you are using genuine supplies and not third-party supplies.
- Make sure that the paper type settings match the paper loaded in the tray.
- Remove the supplies, and then **reinstall the imaging unit** properly to ensure good connection.

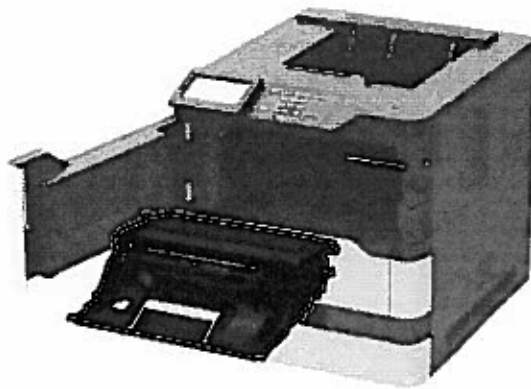

Imaging unit


# Test Page

# 99.99

This text line is intended to show variations that can be seen with very small thin text (CourierPS Font Size 5).

The previous line is CourierPS size 5 font representing small micro fonts.

8 李和平司圖這再體響體響 李和平司圖這再體響體響 10 李和平司圖這再體響體響 李和平司圖這再體響體響

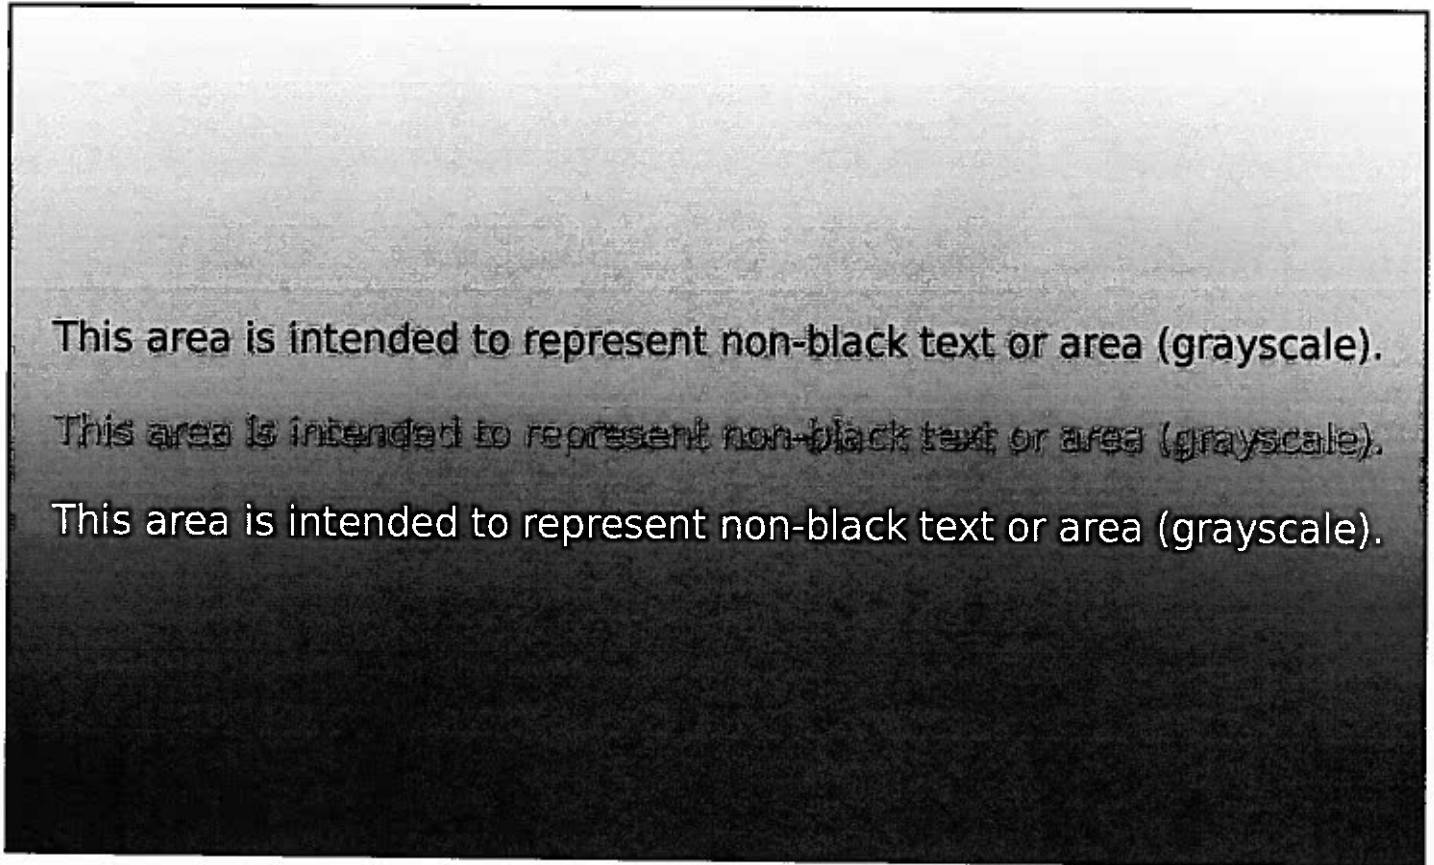

This area is intended to represent non-black text or area (grayscale).

This area is intended to represent non-black text or area (grayscale).

This area is intended to represent non-black text or area (grayscale).



25%

50%

75%

100%