

# Repeating Defects


## Imaging Unit

96 mm (3.78 in.)

49 mm (1.93 in.)

47.5 mm (1.87 in.)

39 mm (1.54 in.)

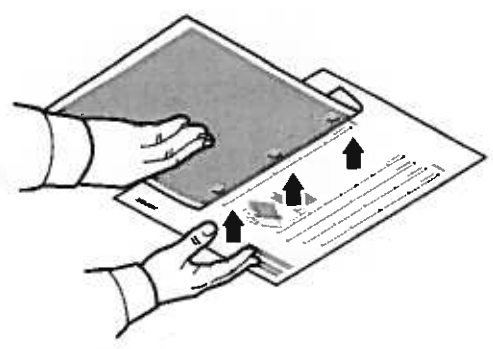

To identify the component causing the defect, compare your print sample against the measurements shown. To diagnose a defect on the transfer belt, print eight Letter/A4-size pages. Verify that the same defect appears on every fourth page. Call for service for this defect.

## Transfer Roller

52 mm (2.05 in.)

## Fuser

89.5 mm (3.52 in.)

80 mm (3.15 in.)

